


1. Purpose / Application

Converts the safety plug receptacles of the EUT LINE OUTPUT of FNS-AX4-A20/AX4-B63 to a wall/service outlet receptacle.

2. Connection and cautions

(1) Mount the unit onto the EUT LINE OUT socket of FNS-AX4-A20/B63.

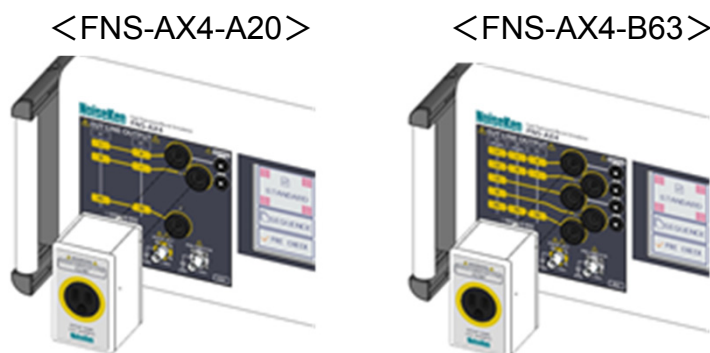

(2) Insert the AC plug of the EUT to the outlet on this unit.

Caution: Never attach to or detach this unit from the FNS simulator while it is producing pulses or the EUT LINE is turned on.
Never set the output voltage at 4.5kV or higher.

3. Specifications



Parameters	18-00081A	18-00082A	18-00083A
Corresponding country	Japan, USA	Japan, USA, Canada, Australia, Switzerland, Italy, Europe, UK	Europe
Corresponding standards	JIS, UL	JIS, UL, CSA, AS, SEV, CEI, CEV, CEE, DIN, BS	CEE, DIN
Rated voltage	AC125V max 50/60Hz	AC250V max 50/60Hz	AC250V max 50/60Hz
Rated current	15A max	20A max	16A max
Operating temperature range	15 to 35 °C		
Operating humidity range	25 to 75%RH (no condensation)		
Waveforms guarantee	Output waveform at the outlet cannot be guaranteed.		
Dimensions (mm)	60 × 100 × 89	60 × 100 × 93	60 × 100 × 111