

**03-00074A Probe Stand Adaptor for GT-30R(A) Instruction Manual**

1. REFACE

Thank you for your purchasing Probe Stand Adaptor for GT-30R(A) MODEL: 03-00074A. This product is an adaptor for mounting the discharge gun GT-30R on the probe stand. Please read this manual for safe usage before using this product.


\*\*\*For details, such as the precautions for safe usage, warranty rules of Noise Laboratory's products, and so on, read the instruction manual of the main body of the ESD simulator or the discharge gun.

2. INSTRUCTIONS


- This product may only be used by a person who understands well the ESD immunity test as well as this manual and is able to use this product safely.
- Be sure to apply the pins of the adaptor to the installation holes of the discharge gun properly and fix them.

3. HOW TO MOUNT

- Insert the tip part of the probe stand into the hole of the adaptor, rotate it 90° clockwise to set it to the groov, and fasten the nut by your hand to fix the adaptor.

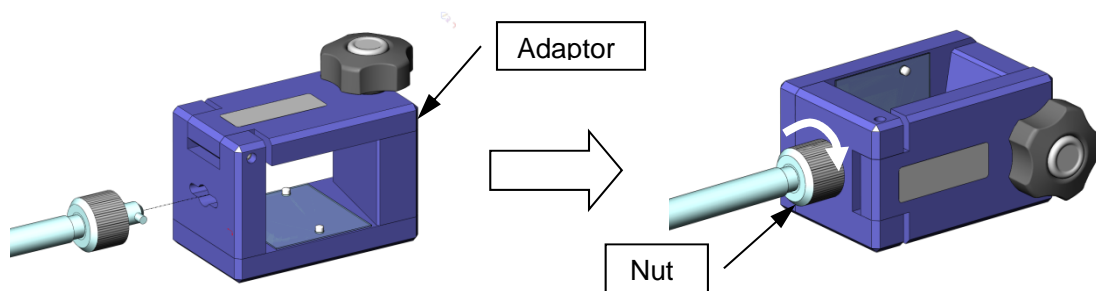

- Apply the two pins of the adaptor to the hole of the discharge gun.
- Close the lid and rotate the knob by your hand to fix the discharge gun.

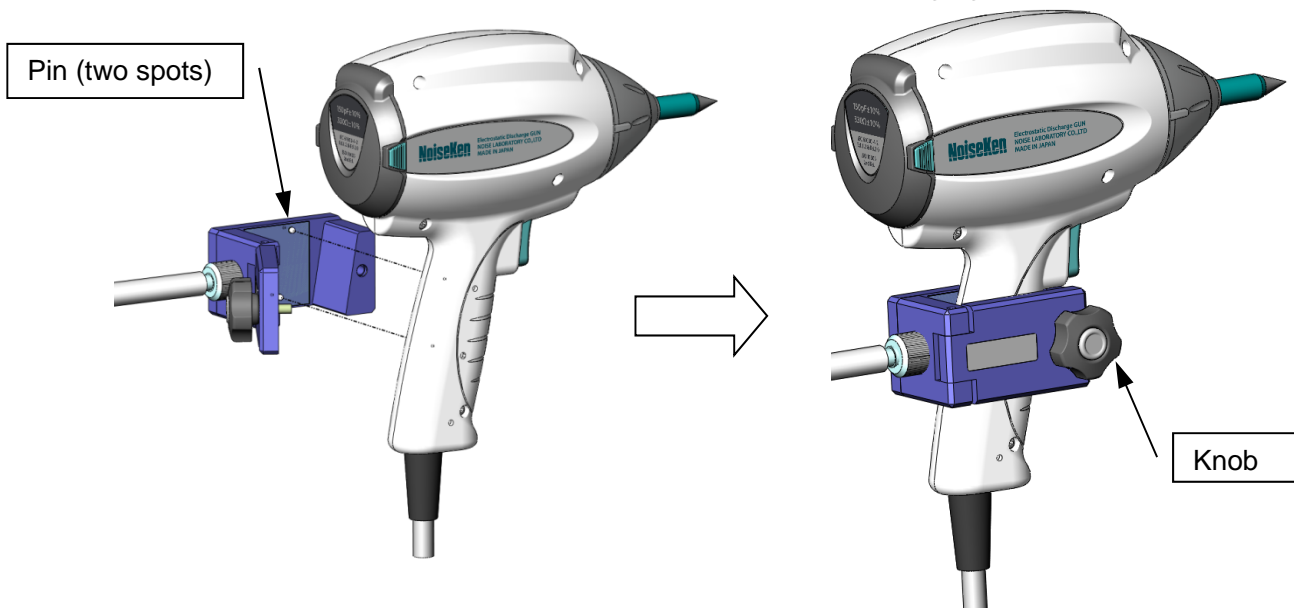

□ Customer Service Center

TEL (042)712-2021

FAX (042)712-2020

## NOTICE

- No part of this leaflet may be reproduced or transferred, in any form, for any purpose, without the permission of Noise Laboratory Co., Ltd.
- The contents of this booklet have been thoroughly checked. However, if a doubtful point, an error in writing or a missing is found, please contact us.
- Noise Laboratory Co., Ltd. shall have no liability for any trouble resulting from the misuse or improper handling of this product regardless of the contents of this booklet or arising from the repair or remodeling of this product by a third party other than Noise Laboratory Co., Ltd. or its authorized person.
- Noise Laboratory Co., Ltd. shall have no liability for any trouble resulting from the remodeling or modification of this product.
- In no event shall Noise Laboratory Co., Ltd. be liable for any results arising from the use of this product.
- Trademarks, company names, and similar that appear in this document are trademarks or registered trademarks of their respective companies. This document does not use the TM and ® symbols.